


# KURO PENDANT

---

T466510

Assembly instructions

**WATT&VEKE®**

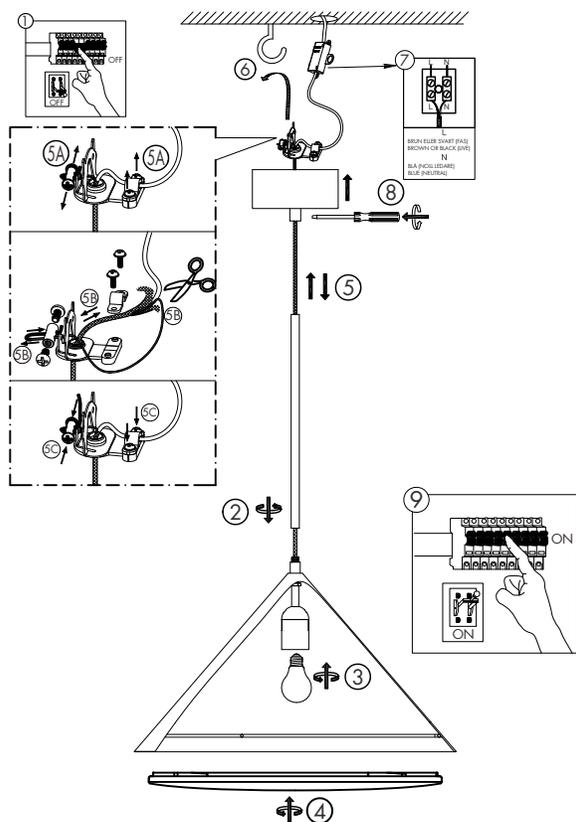

1. Slå av spänningen
2. Skruva fast metallcyklern på lampskärmen
3. Skruva i ljuskällan
4. Sätt i diffusern och vrid tills den är låst
5. Justera ledningslängden till önskad längd  
OBS! Ledningen är förstärkt med en stålwire pga armaturens vikt  
5A. Lossa skruvarna i bägge dragavlastningarna, både den som håller ledningen och den cylinderformade som låser stålwiren  
5B. Justera ledningen, klipp upp ledningens textilöverdrag till önskad längd och separera stålwiren  
5C. Korta av ledning och stålwire till önskad längd. Drag fast skruvarna i dragavlastningarna för säker låsning. Säkerställ att stålwiren är något kortare än elledningen
6. Montera fästkroken i taket och häng upp pendelarmaturen. Obs! vikten
7. Anslut den elektriska ledningen
8. Drag upp takkoppen mot taket och skruva fast låsskruven
9. Slå till spänningen

Nätanslutning: 220-240V~ 50Hz.

Ljuskälla: E27 Max 30W LED

Ljuskälla säljs separat

Endast för inomhusbruk


Om den yttre böjliga kabeln eller sladden till denna belysning skadas, får den endast bytas ut av tillverkaren eller dennes serviceagent eller annan behörig person för att undvika eventuella risker.

#### Skötselråd

Rengör med en torr, mjuk trasa. Använd en fuktad trasa med en mild rengörande produkt vid behov. Använd ej slipande eller starka rengöringsmedel.



Symbolen med den överkorsade soptunnan anger att produkten inte får hanteras som hushållsavfall. Produkten ska lämnas in för återvinning i enlighet med lokala miljöbestämmelser för avfallshantering. Genom att återvinna produkten hjälper du till att minimera potentiella negativa effekter på människors hälsa och på miljön.

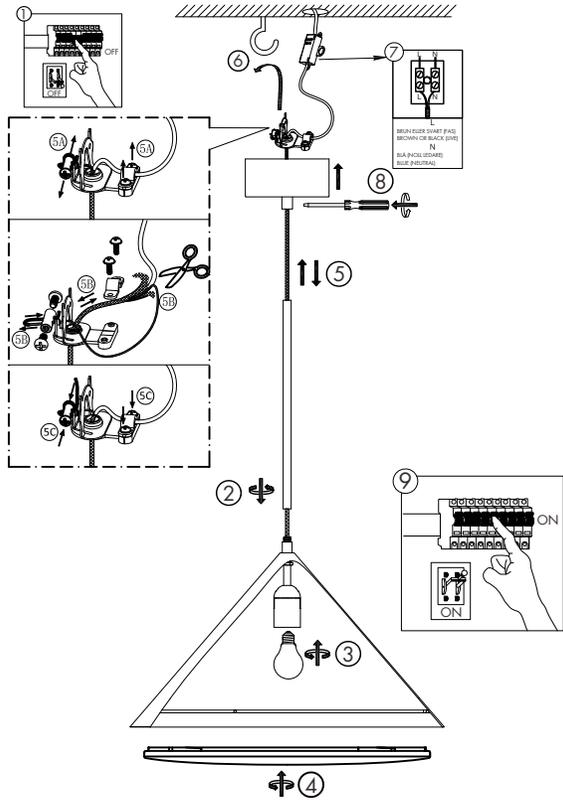

1. Turn off the power
2. Fix the rod to the shade
3. Insert the light source
4. Insert and twist the diffuser until fixed
5. Adjust the cable length to the length you want  
NB, that the cable is enforced by a steel wire due to the weight of the fitting
- 5A. Loosen the screws of two strain reliefs, both for the electrical cable and the clamp holding the steel wire for the weight
- 5B. Adjust the cable, cut open the textile cover and separate the steel wire from the power cable
- 5C. Shorten the cable and the steel wire and tighten the screws in the strain reliefs to fix both. Ensure that the steel wire is shorter than the power cable
6. Fix the hook to the ceiling and hang up the pendant lamp. NB! the weight
7. Connect the electric cable
8. Tighten canopy to the ceiling and fixate with the locking screw
9. Turn on the power

Rated voltage: 220-240V~ 50Hz.  
Light source: E27 Max 30W LED  
Light source is sold separately  
For indoor use only

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

### Cleaning instructions

Wipe off dust with dry soft cloth. Remove stains with water and a light detergent or soap applied with a damp cloth. Do not use detergents containing abrasives or solvents.



The crossed-out wheeled bin symbol indicates that this product may not be treated as household waste. It should be disposed of in accordance with local environmental regulations for waste disposal. By recycling this product, you will help to minimize potential negative consequences for human health and the environment.

**THANK YOU  
FOR CHOOSING  
A WATT&VEKE  
LIGHTING PRODUCT**

Watt&Veke AB | Tegnérsgatan 14 | S-113 58 Stockholm, Sweden

[wattveke.se](http://wattveke.se)